

ACCESSORIES



x6 PSU
screws



x9 storage
unit screws



x3 MB
spacers



x18 MB
screws




x1 spacer
key




x5 cable
ties

OPENING THE PC CASE

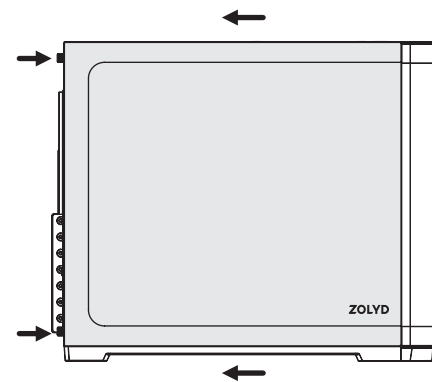


Remove the thumb screws located at the back of the left panel. Slide the panel backwards to release it.

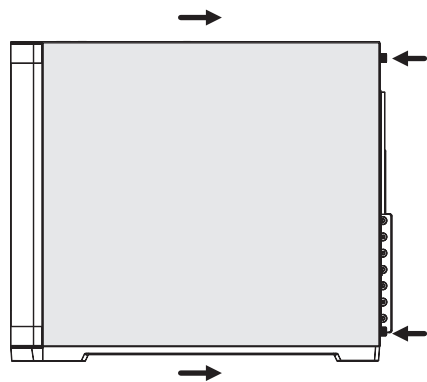

Remove the thumb screws located at the back of the right panel. Slide the panel backwards to release it.


STORAGE UNITS INSTALLATION

2x 2.5" STORAGE UNITS

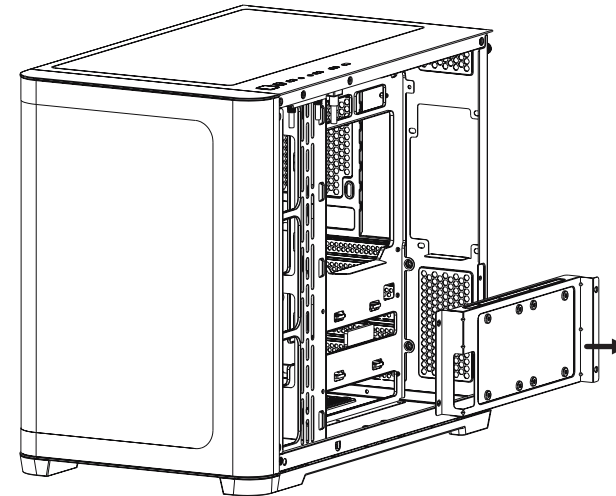


1.1) Remove the storage units drawer from the PC case. Remove the screws and pull it out.

1.2) Place the 2.5" units over the storage drawer. Screw the storage units to the drawer by inserting the screws through the inside. Reinstall the drawer back into the PC case.

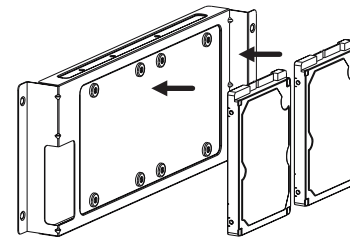


STORAGE UNITS INSTALLATION

1x 3.5" STORAGE UNIT

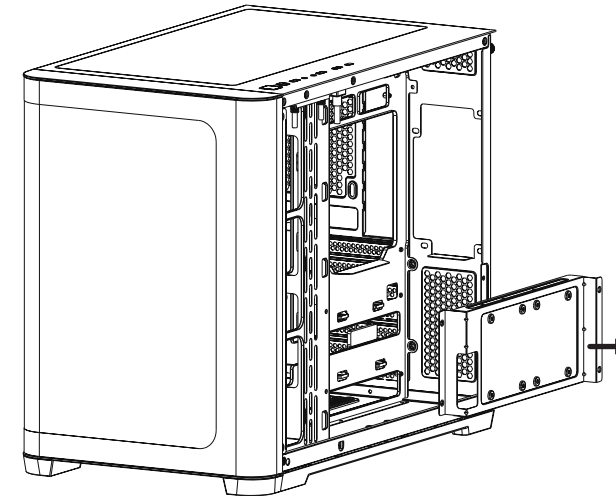


1.1) Remove the storage units drawer from the PC case. Remove the screws and pull it out.


1.2) Place the 3.5" unit inside the storage drawer. Screw the storage unit to the drawer by inserting the screws through the sides of the drawer. Reinstall the drawer back into the PC case.

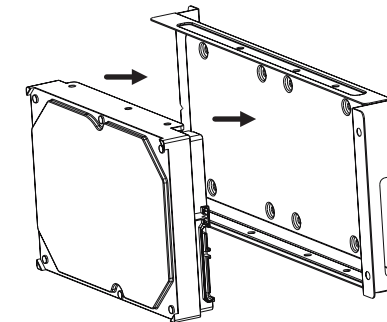

EXTRA FANS OR LIQUID COOLING INSTALLATION

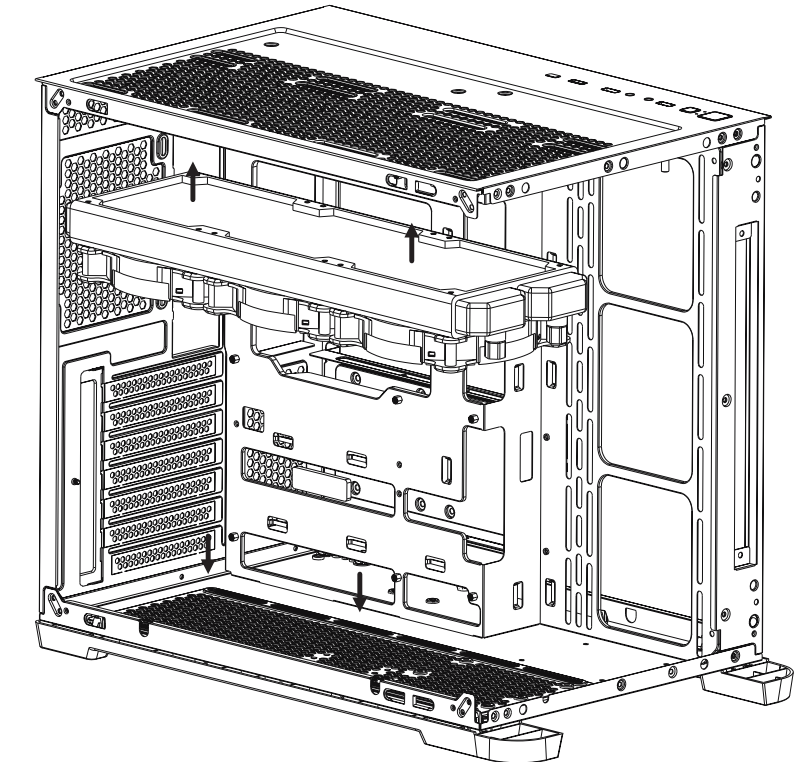

Align the fans or radiator with the fixation holes on the top or base of the PC case. Attach the fixation screws on the fans or radiator.

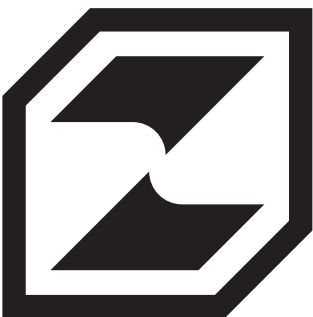

zolyd.eu

TECHNICAL ASSISTANCE

Regarding technical issues, please visit www.zolyd.eu or contact us through support@zolyd.eu.

STATEMENT OF COMPLIANCE WITH EUROPEAN UNION DIRECTIVES

Zolyd declares that this product is in compliance with the essential requirements and other relevant provisions from the following Directives: 2014/30/EU; 2011/65/EU; 2014/35/EU, as applicable.

The technical documentation required by the Conformity Evaluation Process is in Zolyd's possession and can be requested through support@ilectry.eu.

DISPOSAL OF BATTERIES AND ELECTRICAL OR ELECTRONIC EQUIPMENT WASTE

The existence of this symbol on the product, batteries or respective packaging, signifies that this product and the contained batteries can not be disposed as domestic waste. It is the user's responsibility to deliver this product at a batteries, electrical or electronic recycling pick-up point. The pick-up and separate recycling contributes for the preservation of natural resources and supresses potential negative consequences for the human health and the environment resultant of inadequate disposal of dangerous substances contained in batteries and electrical or electronic equipment. For additional informations regarding batteries, electrical or electronic recycling pick-up points, please contact your local municipal services.

ARGB FAN HUB INSTALLATION

The ARGB fan hub is located behind the motherboard's installation panel.


1) Turn off the PC and the PSU.

2) Plug the motherboard's RGB cable (A); plug the SATA's power cable (B); plug the RGB FX button's cable (C).

3) Connect the fan LED plug (D) on LED 1 port and the fan power plug (E) on FAN 1 port.

Repeat step 3, correspondingly, for the other fans.

The LED and FAN port pins are fragile. Be careful, make sure they are properly aligned with the plugs during installation. Do not force.

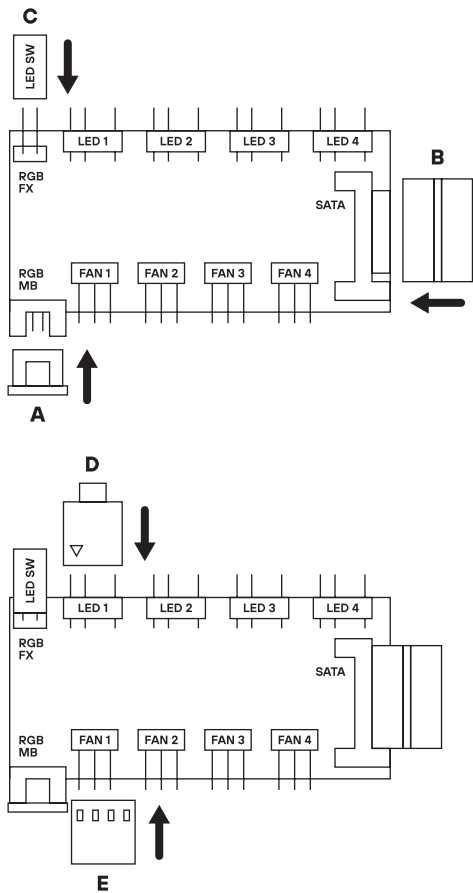

COMPATIBILITY

Motherboard: ATX, Micro-ATX, Mini-ITX

CPU cooler: 160 mm max. height

GPU: 440 mm max. length

Connections: 2x USB-A 3.0; 1x USB-C 3.1; 1x audio in; 1x audio out

Expansion slots: 7

Liquid cooling (not included):

Motherboard: 120 / 240 / 360 mm • Base: 120 / 240 / 360 mm • Top: 120 / 240 / 360 mm

ZOLYD

krytera

ATX Computer Case

User Guide