

## ACCESSORIES



x6 PSU screws



x8 storage unit screws



x16 MB screws



x3 MB spacers




x1 spacer key




x8 cable ties

## OPENING THE PC CASE

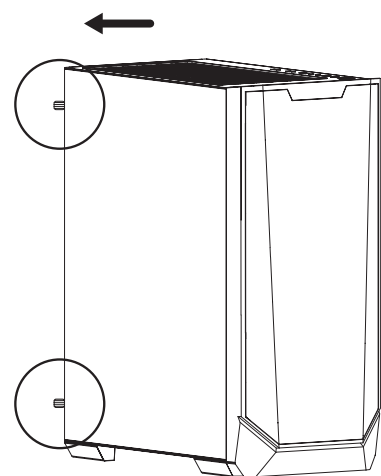


Remove the thumb screws located at the back on the left panel. Slide the panel backwards to release it.

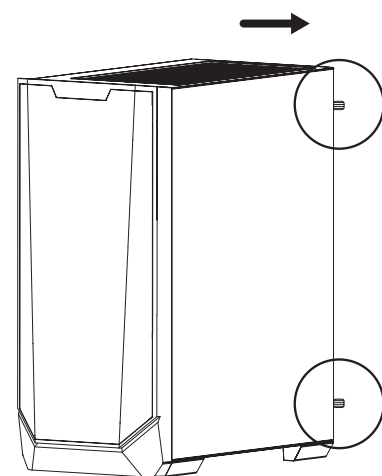


Remove the thumb screws located at the back on the right panel. Slide the panel backwards to release it.

## STORAGE UNITS INSTALLATION


1x 2.5" + 1x 3.5" STORAGE UNITS

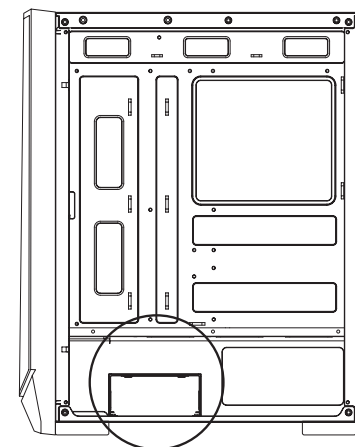

1.1) Remove the storage units drawer from the PC case. Push it down and slide it out.

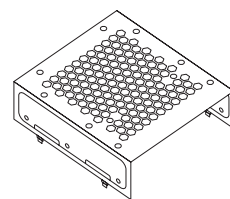


1.2) Place the 2.5" unit over the storage drawer. Screw the storage unit to the drawer by inserting the screws through the bottom.

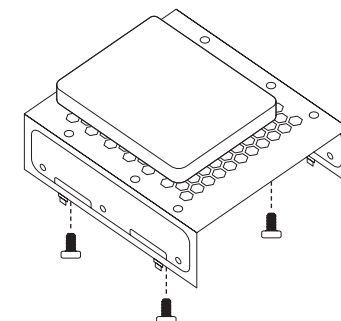


2) Insert the 3.5" unit under the storage drawer. Screw the storage unit to the drawer from the sides.

Reinstall the drawer back into the PC case.

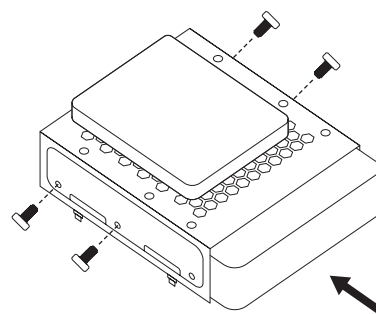


## STORAGE UNITS INSTALLATION


2x 3.5" STORAGE UNITS

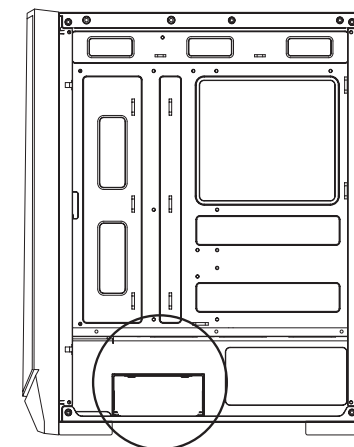

1.1) Remove the storage units drawer from the PC case. Push it down and slide it out.

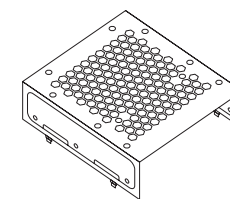


1.2) Place the 3.5" unit over the storage drawer. Screw the storage unit to the drawer by inserting the screws through the bottom.

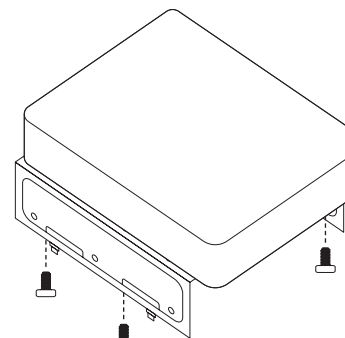

2) Insert the 3.5" unit under the storage drawer. Screw the storage unit to the drawer from the sides.


Reinstall the drawer back into the PC case.

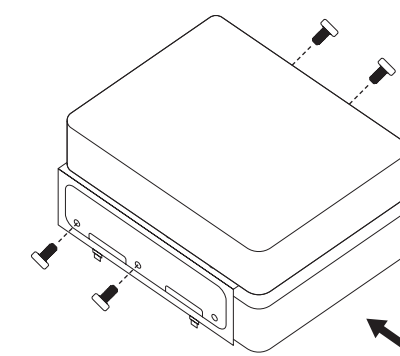

## PSU COMPARTMENT FANS INSTALLATION

1) Align the fans with the fixation holes on the PC case. Attach the fixation screws through the top of the fans. You must use long fan screws.

You can install 2x 120 mm fans on the PSU compartment.

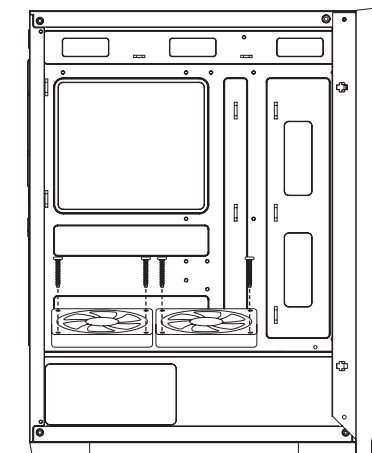



zolyd.eu

## TECHNICAL ASSISTANCE

Regarding technical issues, please visit [www.zolyd.eu](http://www.zolyd.eu) or contact us through [support@zolyd.eu](mailto:support@zolyd.eu).

## STATEMENT OF COMPLIANCE WITH EUROPEAN UNION DIRECTIVES

Zolyd declares that this product is in compliance with the essential requirements and other relevant provisions from the following Directives: 2014/30/EU; 2011/65/EU; 2014/35/EU, as applicable.

The technical documentation required by the Conformity Evaluation Process is in Zolyd's possession and can be requested through [support@ilectry.eu](mailto:support@ilectry.eu).

## DISPOSAL OF BATTERIES AND ELECTRICAL OR ELECTRONIC EQUIPMENT WASTE

The existence of this symbol on the product, batteries or respective packaging, signifies that this product and the contained batteries can not be disposed as domestic waste. It is the user's responsibility to deliver this product at a batteries, electrical or electronic recycling pick-up point. The pick-up and separate recycling contributes for the preservation of natural resources and supresses potential negative consequences for the human health and the environment resultant of inadequate disposal of dangerous substances contained in batteries and electrical or electronic equipment. For additional informations regarding batteries, electrical or electronic recycling pick-up points, please contact your local municipal services.

## ARGB FAN HUB INSTALLATION

The ARGB fan hub is located behind the motherboard's installation panel.


1) Turn off the PC and the PSU.

2) Plug the motherboard's RGB cable (A); plug the SATA's power cable (B); plug the RGB FX button's cable (C).

3) Connect the fan LED plug (D) on LED 1 port and the fan power plug (E) on FAN 1 port.

Repeat step 3, correspondingly, for the other fans.

The LED and FAN port pins are fragile. Be careful, make sure they are properly aligned with the plugs during installation. Do not force.

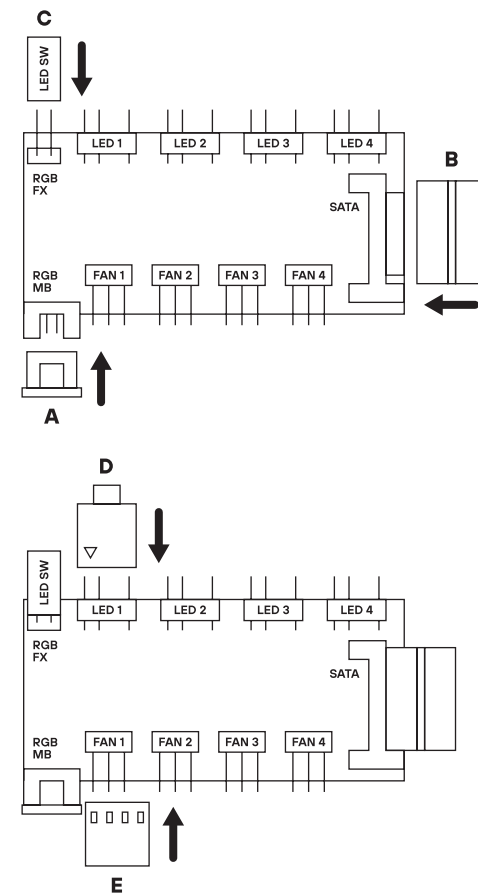

## COMPATIBILITY

**Motherboard:** E-ATX, ATX, Micro-ATX, Mini-ITX

**CPU cooler:** 163 mm max. height

**GPU:** 340 mm max. length

**Connections:** 2x USB-A 2.0; 1x USB-A 3.0; 1x audio in; 1x audio out

**Expansion slots:** 7 + 2 vertical

**Liquid cooling (not included):** Front: 120 / 240 / 360 mm • Back: 120 mm • Top: 120 / 240 mm

ZOLYD

luminon

E-ATX Computer Case

User Guide