

WANT
TO KNOW
MORE?

zolyd.eu

CE STATEMENT OF COMPLIANCE WITH EUROPEAN UNION DIRECTIVES

Zolyd declares that this product is in compliance with the essential requirements and other relevant provisions from the following Directives: 2014/30/EU; 2014/35/EU; 2011/65/EU, as applicable. The technical documentation required by the Conformity Evaluation Process is in Zolyd's possession and can be requested through support@zolyd.eu.

DISPOSAL OF BATTERIES AND ELECTRICAL OR ELECTRONIC EQUIPMENT WASTE

The existence of this symbol on the product, batteries or respective packaging, signifies that this product and the contained batteries can not be disposed as domestic waste. It is the user's responsibility to deliver this product at a batteries, electrical or electronic recycling pick-up point. The pick-up and separate recycling contributes for the preservation of natural resources and suppresses potential negative consequences for the human health and the environment resultant of inadequate disposal of dangerous substances contained in batteries and electrical or electronic equipment. For additional informations regarding batteries, electrical or electronic recycling pick-up points, please contact your local municipal services.

TECHNICAL ASSISTANCE

Regarding technical issues, please visit www.zolyd.eu or contact us through support@zolyd.eu.

SAFETY - EU 2023/988

Electrical installation: Connect the PSU only to outlets that are in good condition and comply with local electrical standards. Do not overload the PSU; ensure that the total power consumption of the installed components do not exceed the maximum supported capacity. Do not connect or disconnect internal components while the PSU is powered on. Use only the supplied power cord or a certified equivalent.

Risk of electric shock: Never expose the PC case, PSU or fan to liquids. Do not open the PSU housing — no user-serviceable parts inside. Do not use the product if the PSU, cables, or connectors are damaged.


Ventilation and heating: Ensure proper airflow when installing the PC case. Do not block ventilation openings on the PC case or PSU.. Avoid placing the product near heat sources or in excessively humid environments.

Mechanical safety: Be careful when handling internal metal edges — risk of cuts. Keep fingers, hair, and objects away from operating fans.


Use and maintenance: This product is intended for indoor use only. Clean dust regularly with a dry cloth; never use solvents or aggressive cleaning products. Do not attempt to modify or repair the PSU or fan without qualified technical assistance.

Intended users: Not suitable for children. Keep small parts (screws, accessories) out of the reach of children and pets.


PSU - CONNECTIONS AND SPECIFICATIONS

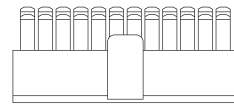


x1 24 pin
motherboard

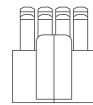


x1 4+4 pin
CPU

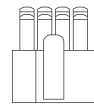

x2 6+2 pin
PCI-E

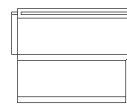

x3 SATA

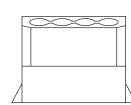

x2 Molex

AC Input	200Vac - 240Vac • 10A • 50Hz				
DC Output	+3.3V	+5V	+12V	-12V	+5Vsb
Max Output Current	15A	15A	41A	0.3A	2.5A
Max Combined Watts	100W		492W	3.6W	12.5W
Max Power	500W				

COMPATIBILITY


Motherboard: Micro-ATX, Mini-ITX

CPU cooler: 140 mm max. height

GPU: 300 mm max. length

Connections: 1x USB-A 3.0; 2x USB-A 2.0; 1x audio in; 1x audio out

Expansion slots: 4

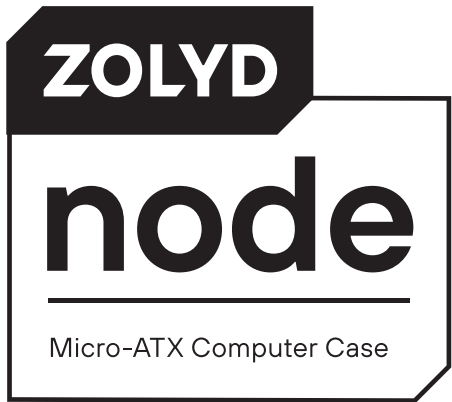

ACCESSORIES



x13 MB screws



x6 storage unit screws




x6 PSU screws




x3 MB spacers

OPENING THE PC CASE

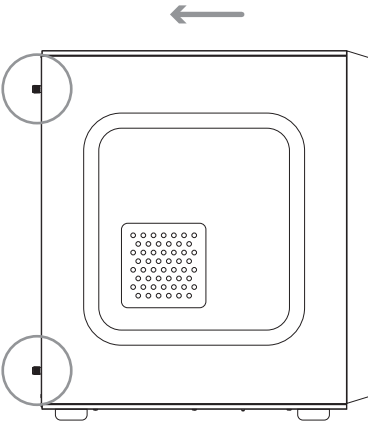


Remove the screws located at the back of the left panel. Slide the panel backwards to release it.

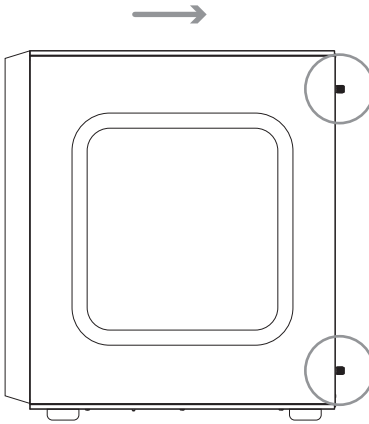

Remove the screws located at the back of the right panel. Slide the panel backwards to release it.



STORAGE UNITS INSTALLATION

1x 3.5" STORAGE UNITS

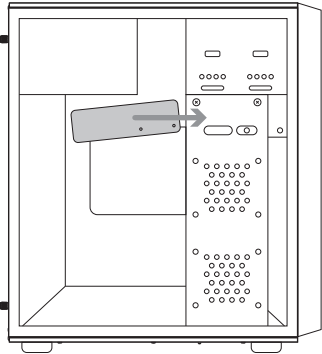


1.1) Insert the storage unit on the PC case.

1.2) Attach the storage unit to the PC case.
Insert the screws from both sides of the case.

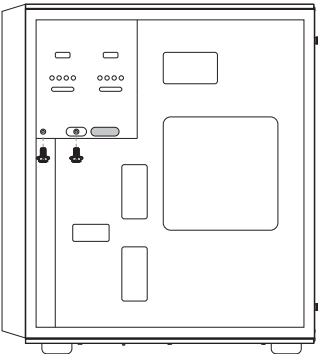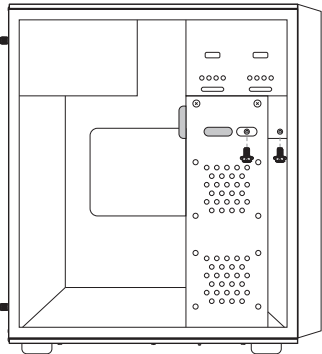


STORAGE UNITS INSTALLATION

2x 2.5" STORAGE UNITS

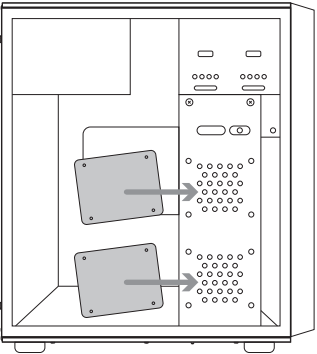


1.1) Place the storage units on the PC case.
Align the units with the fixation holes on the plate.

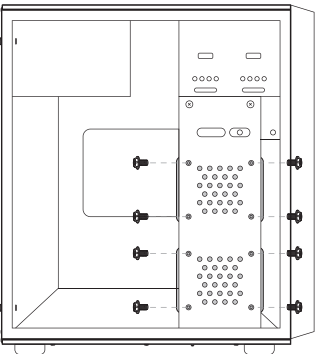


1.2) Install the storage units on the PC case by inserting the screws from the exterior, passing through the fixation plate and attaching to the storage units.

EXTRA FANS INSTALLATION


Align the fans with the fixation holes on the front, rear and side panels on the PC case. Attach the fixation screws on the fans.

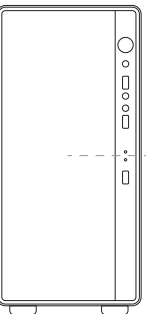

Front panel: 1x 80 mm or 1x 120 mm fans.

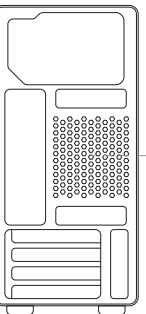

Rear panel: 1x 80 mm fan.

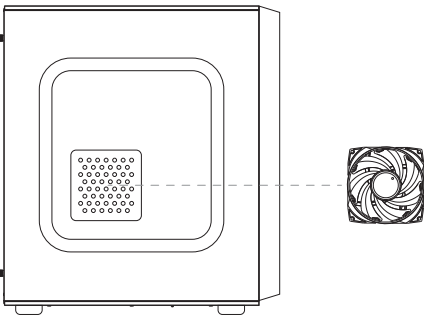

Side panel: 1x 120 mm fan.