



ACCESSORIES

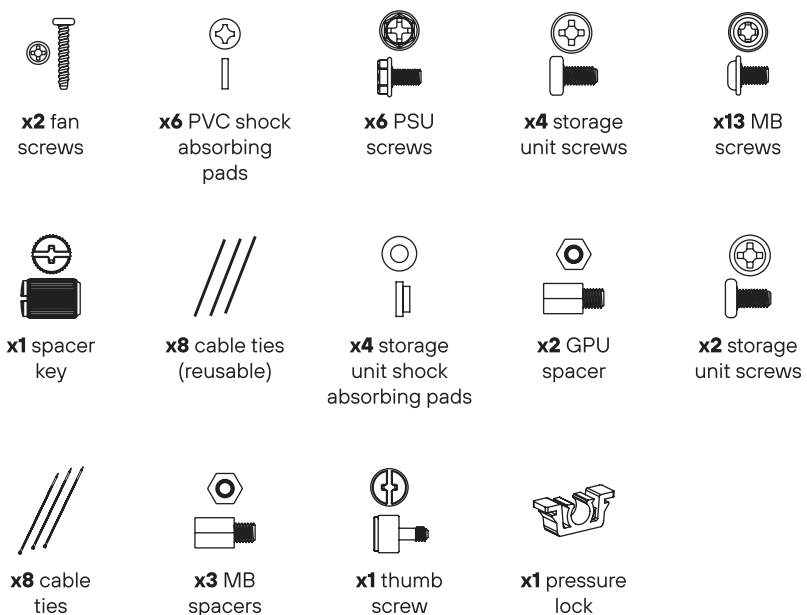


OPENING THE PC CASE

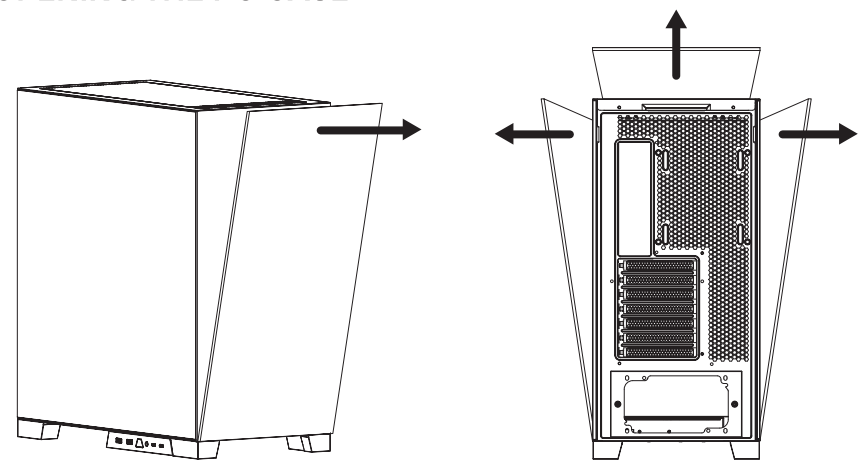


Open the front panel from the top.

Open the top panel from the rear.
Open the right and left panels from the rear.


PSU INSTALLATION

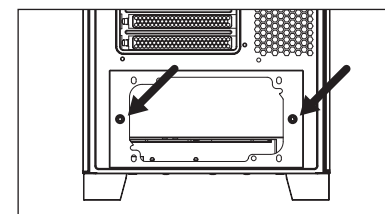

1) Release the PSU's plate from the back of the PC case by detaching the two fixation screws.

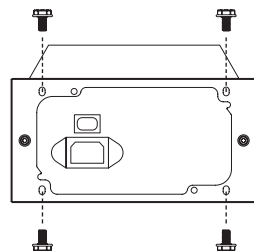


2) Attach the plate into your PSU by using the fixation screws.

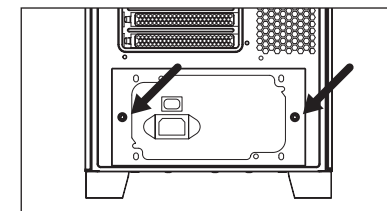

3) Install the PSU into the PC case by reattaching the plate's fixation screws.



REMOVING THE FRONT COLUMN

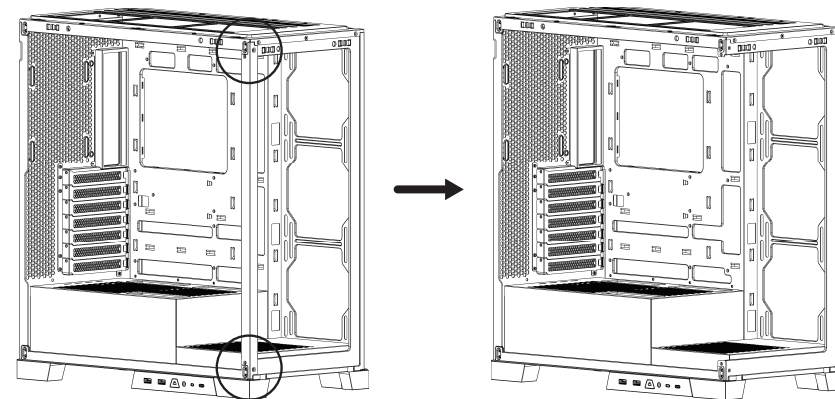


Remove the 2 screws located on the front.
Remove the 2 screws located on the the side.

STORAGE UNITS INSTALLATION



1x 2.5" STORAGE UNIT

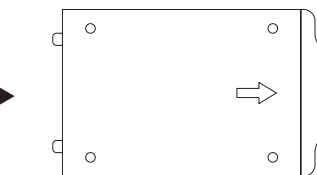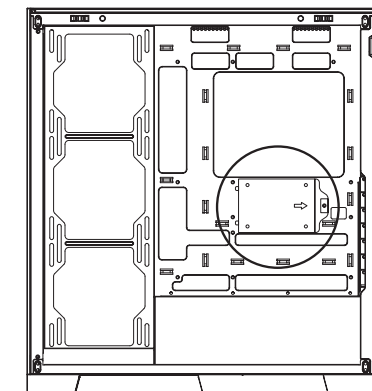

1) Unscrew the 2.5" storage unit's fixation plate and remove it from the PC case.

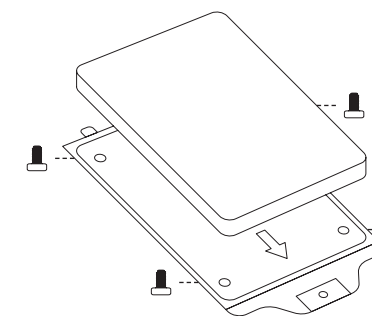


2) Place the 2.5" storage unit over the fixation plate. Screw the storage unit to the plate by inserting the screws through the bottom of the plate.

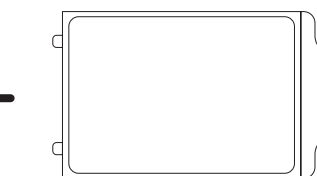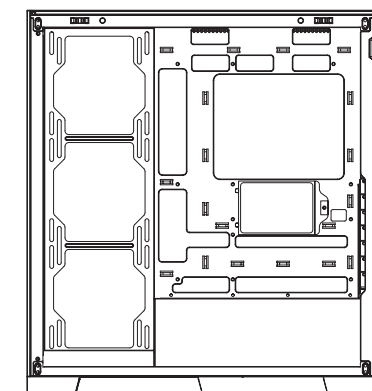

3) Reinstall the fixation plate back into the PC case.

STORAGE UNITS INSTALLATION

1x 3.5" STORAGE UNIT

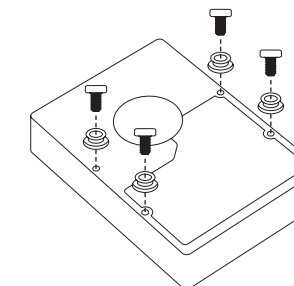


1) Place the storage unit's shock absorbing pads on the fixation screws.

2) Attach the fixation screws to the bottom of the 3.5" storage unit.

The pads will act as anchors and will secure the storage unit onto the PC case.

3) Align the shock absorbing pads over the slits at the bottom panel.


Push down and slide the storage unit into position, towards the front of the PC case. Make sure that the storage unit is firmly secured in place.

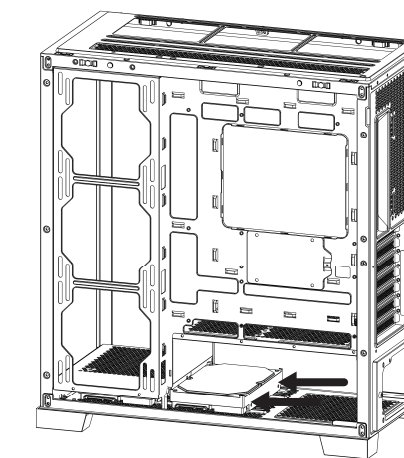

BASE FAN INSTALLATION

1) Align the fan with the fixation holes on the PC case. Secure it from the top with two long fan screws.

You can install 1x 120 mm or 1x 140 mm fan at the base.

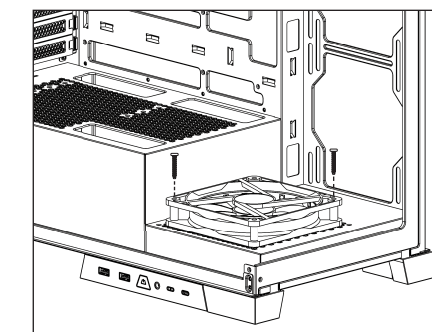



zolyd.eu

TECHNICAL ASSISTANCE

Regarding technical issues, please visit www.zolyd.eu or contact us through support@zolyd.eu.

STATEMENT OF COMPLIANCE WITH EUROPEAN UNION DIRECTIVES

Zolyd declares that this product is in compliance with the essential requirements and other relevant provisions from the following Directives: 2014/30/EU; 2011/65/EU; 2014/35/EU, as applicable.

The technical documentation required by the Conformity Evaluation Process is in Zolyd's possession and can be requested through support@ilectry.eu.

DISPOSAL OF BATTERIES AND ELECTRICAL OR ELECTRONIC EQUIPMENT WASTE

The existence of this symbol on the product, batteries or respective packaging, signifies that this product and the contained batteries can not be disposed as domestic waste. It is the user's responsibility to deliver this product at a batteries, electrical or electronic recycling pick-up point. The pick-up and separate recycling contributes for the preservation of natural resources and supresses potential negative consequences for the human health and the environment resultant of inadequate disposal of dangerous substances contained in batteries and electrical or electronic equipment. For additional informations regarding batteries, electrical or electronic recycling pick-up points, please contact your local municipal services.

ARGB FAN HUB INSTALLATION

The ARGB fan hub is located behind the motherboard's installation panel.


1) Turn off the PC and the PSU.

2) Plug the motherboard's RGB cable (A); plug the SATA's power cable (B); plug the RGB FX button's cable (C).

3) Connect the fan LED plug (D) on LED 1 port and the fan power plug (E) on FAN 1 port.

Repeat step 3, correspondingly, for the other fans.

The LED and FAN port pins are fragile. Be careful, make sure they are properly aligned with the plugs during installation. Do not force.

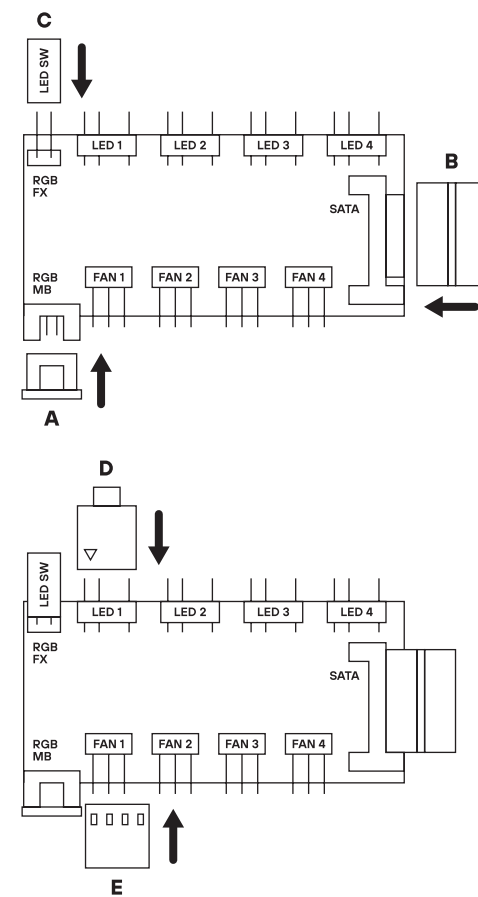

COMPATIBILITY

Motherboard: ATX, Micro-ATX, Mini-ITX

CPU cooler: 180 mm max. height

GPU: 425 mm max. length

Connections: 2x USB-A 3.0; 1x USB-C 3.1; 1x audio in / out

Expansion slots: 7

Liquid cooling (not included): Motherboard: 120 / 240 / 360 mm • Back: 120 mm • Top: 120 / 240 / 360 mm

ZOLYD

vexora

ATX Computer Case

User Guide